

---

## Disassembly Procedures

### Removing the Left Side Panel

1. Put the computer on a flat surface.
2. Remove the two screws securing the left side panel to the chassis.



Quantity	Color	Torque	Part Number	Screw Type
2	Black	6.0 ± 0.5 kgf-cm	86.SR2D1.001	

3. Slide the side panel toward the back of the chassis until the tabs on the side panel disengage with the slots on the chassis.



4. Detach the side panel from the unit and put it aside for re-installation later.

---

## Removing the Left Side Transparent Cover


**NOTE:** For systems with transparent cover only.

1. Put the computer on a flat surface.
2. Remove the four thumbscrews securing the left side transparent cover to the chassis.



Quantity	Color	Torque	Part Number	Screw Type
4	Black	6.0 ± 0.5 kgf-cm	N/A	


3. Gently detach the left side transparent cover from the chassis and put it aside for re-installation later.

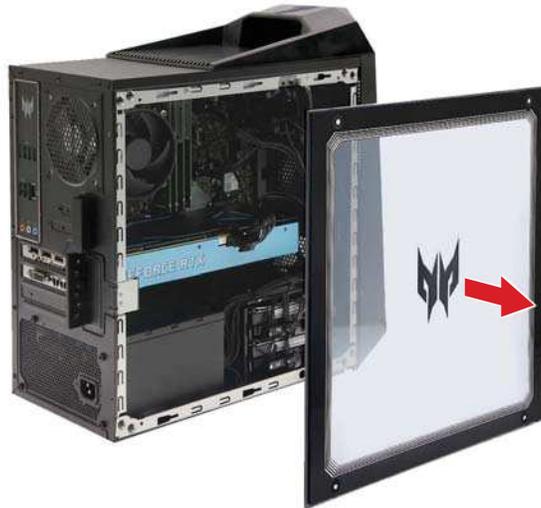

---

## Removing the Earphone Holder

1. Remove the two screws securing the earphone holder to the chassis.

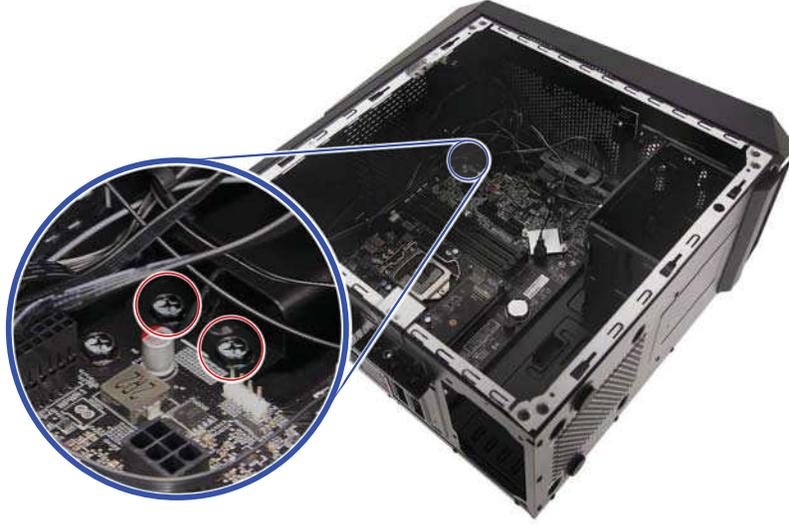

Quantity	Color	Torque	Part Number	Screw Type
2	Black	6.0 ± 0.5 kgf-cm	86.B9AD1.001	


2. Pull the earphone holder out of the chassis.



---

## Removing the Front Bezel

1. Disconnect the Power Button/LED cables from the mainboard.

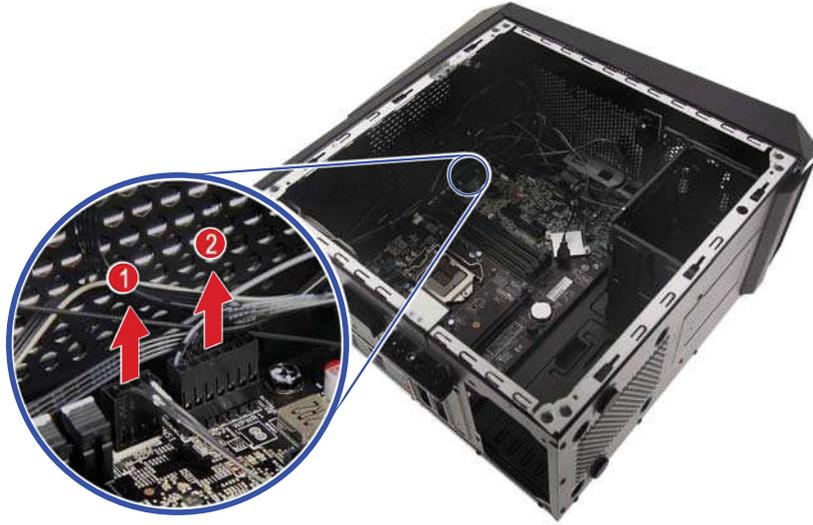

2. Detach the front bezel from the chassis.



- 
3. Pull out the Power Button/LED cables from the chassis.

