

Setup Bandwidth Control

General

- ☐ Disable Bandwidth Control
☒ Enable Bandwidth Control all the time
☐ Enable Bandwidth Control when bandwidth usage reaches %

Default Limit

Direction	Limited Bandwidth (Kbps)
Upstream	<input type="text" value="0"/>
Downstream	<input type="text" value="0"/>

Interface Bandwidth

Interface	Upstream Bandwidth (Kbps)	Downstream Bandwidth (Kbps)
WAN1	2000	6000
WAN2	2000	6000
Total	4000	12000

[Save](#)
[View IP Traffic Statistics](#)
[Help](#)

Note:

To make "Bandwidth Control" take effect, please first configure WAN bandwidth on "Network"->"WAN" page.